# **Enviroclean Parts Washer Operator's Manual & Safety Information**



# **OPERATING THE PARTS WASHER**

- Enviroclean Automatic Parts Washers must be placed undercover in a well-ventilated location.
- Safety equipment, including gloves and safety glasses, should be used.
- For best results, parts must be evenly distributed in the rotating basket – do not overload.
- Handle must be used in lifting and closing of the lid, making sure that hands and clothing are well clear.
- After the lid is closed, latch must be secured.
- Once the 'start' button is activated, the automatic cycle runs for 10 minutes. You can stop this cycle at any time by pressing the 'stop' button.
- When cycle is finished, WAIT for 1 minute before opening the lid. This allows any VOCs to settle and reduces fluid dripping.
- The manual hand wash only operates when the lid is open. Using the 'start' button, the hand wash will operate for 10 minutes and will shut itself off. Alternatively, the 'stop' button can be used as required.
- To prevent damage to the rubber hose and hand brush, ensure it is not left inside the rotating basket.

# **PRE-CHECKS**

- Ensure electrical plug is tagged & in good working order.
- Ensure that electrical plug is plugged directly into wall socket.
- Check that machine gas struts, which allow the lid to lift up and down, are operating in a controlled manner.
- Check that the safety lock-in bar, supplied with the 900mm & 1200mm machines, does lock in position.

#### **CARE AND MAINTENANCE**

- Do not place items on the machine lid before, during or after wash cycles.
- Clean out mesh filter located within the machine at least once per week – or more frequently if parts washer is in constant use. This is the primary filtration in the machine. <u>A clean mesh</u> <u>screen filter keeps the fluid and the machine</u> <u>cleaner for longer.</u>
- To prevent build up of grease & oils, wipe down the outside of the machine at least once a week.
  For best results, dip a rag in the parts washer solution, wipe the machine down and follow with a clean, dry cloth.
- Use only Recosol V80 Parts Washer Solvent or an approved solvent that has been authorised by your Enviroclean Representative.

# FIRST AID AND SAFETY

Personal protective equipment including gloves and safety glasses should be used when operating the Enviroclean Parts Washer.

First Aid measures and other detailed information regarding the solvent is contained in the Material Safety Data Sheet for Recosol V80.

# **SERVICING YOUR MACHINE**

Machines are serviced on a needs basis, generally twice per year, unless agreed otherwise by your Enviroclean Representative.

Servicing involves pumping out the fluid from the holding tank, cleaning the mesh filter, thoroughly cleaning the washing area, removing solid waste from the bottom of the holding tank, refilling the fluid tank with fresh fluid, and checking the flow through the brusher and finally the automatic machine itself.

Once a machine has been serviced, the used solvent is recycled and distilled to minimize waste.

Servicing enquiries: Contact 0409 579 422